



WARRANTY CARD INSTRUCTION MANUAL

Striker Electronic 100 (100SD1E) / 70 (70SD1E) DESERT COOLER

Power rating: 190W • Rated voltage: 230 Volt

• Rated frequency: 50 Hertz

.....

Portable Evaporative Air Cooler

OWNER'S MANUAL

Read and save these instructions before use.

QUICK START GUIDE

Read all instructions carefully before setting up and operating the cooler, and please keep this instruction manual for future reference. This manual is designed to provide you with important information needed to setup, operate, maintain, and troubleshoot your cooler. Failure to follow these instructions may damage and/or impair its operation and void the warranty.

- **Fill the tank with water and plug the cooler in standard power outlet socket.**
Note: Please make sure the household power voltage matches the product specifications.
- **Place near an open door or window.**
Note: Evaporative air cooler requires cross ventilation.
- **Keep distance of minimum 0.5M from the wall.**
- **Cooler works best when placed near an open window.**
- **Turn ON and enjoy the cool breeze.**
Note: Start with low speed and gradually increase to higher speed for optimum cooling performance.
- **Keep the room ventilated for max effectivity / efficiency.**
Note: When the product is used for the first time the Honeycomb cooling media will have an odor which will dissipate in a week or so of initial use



THANK YOU

Congratulations on your purchase of this versatile USHA Evaporative Air Cooler. For optimum cooling from your cooler, fill the water tank to maximum level before you turn on your air cooler.

 
 
Not an Air Conditioner (Important - Please read!)

The evaporative air cooler is not an air conditioner as it does not use a compressor or refrigerant gas. It should not be expected to cool as efficiently as a refrigerated air conditioner

USER TIPS

Energy efficient, No compressor

USHA Evaporative Air Coolers are built to maximize energy efficiency and keep costs low. This no-compressor system cools naturally, efficiently and inexpensively. The recommended relative humidity is 60% or less which allow noticeable temperature decrease in the air.

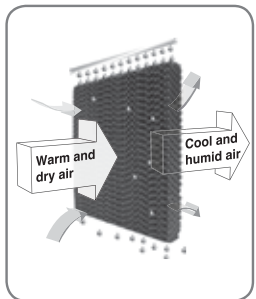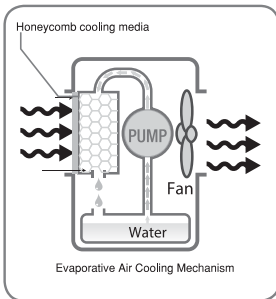

SAFETY

READ AND SAVE THESE INSTRUCTIONS:

When using electrical appliances, basic safety precautions should always be followed:

- Your cooler runs on 230 Volt AC, 50 Hz. Check the household voltage to ensure it matches the appliance's rated specification.
- Before operating the product remove it from its packaging and check that it is in good condition.
- DO NOT operate any product with a damaged cord or plug. We recommend not using an extension cord with this appliance.
- DO NOT run power cord under carpeting, or cover it with rugs or runners. Keep the cord away from areas where it may be tripped over.
- Always unplug the product before refilling the water tank.
- Always unplug the appliance from the power source before cleaning, servicing or relocating the unit.
- Remove the power cord from the electrical receptacle by grasping and pulling on the power cord plug-end only, never pull the cord.
- DO NOT use the product in areas where gasoline, paint or other flammable goods and objects are stored.
- When using the "COOL" setting, check the water tank to ensure that it is full. Operation of this cooler on the "COOL" setting with an empty tank may result in damage to the water pump.
- DO NOT attempt to repair or adjust any electrical or mechanical functions of the cooler, as this may void the warranty.

 
SHOCK HAZARD



230 Volt AC 50 Hz




WATER LEVEL INDICATOR

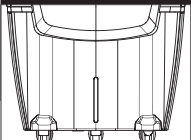


SAFETY

- DO NOT cover the air inlet or outlet on the appliance as this may cause motor damage.
- DO NOT insert or allow objects to enter any ventilation or exhaust opening as this may damage the product and could cause an electrical shock or fire.
- DO NOT operate with the Honeycomb media removed as this will overload and damage the motor.
- DO NOT leave the operating appliance unattended for an extended period of time.
- DO NOT let children play with this appliance, packaging or plastic bags.
- If the unit is damaged or it malfunctions, do not continue to operate it. Refer to the troubleshooting section and seek professional advice.
- Place the unit on a level floor. This product is not intended for use in wet or damp locations.
- DO NOT use in bathrooms. Never locate the product where it may fall into a water container.
- Store in a dry area when not in use. This appliance is not intended for use by persons (including children or elderly) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always grip from sides to move the cooler.

 
FIRE TOUCH

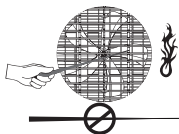

COOLER FLOOR SETTING

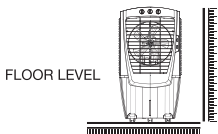 


PARTS DESCRIPTION

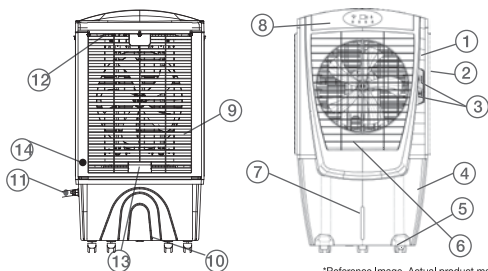 

*Reference Image. Actual product may differ.


- | | |
|-------------------------------------|--------------------------------------|
| 1 Handle | 2 Side Honeycomb Panel |
| 3 Lever for Horizontal Louvers | 4 Water Tank |
| 5 Castor Wheel | 6 Horizontal Louvers |
| 7 Water Level Indicator | 8 Control Panel |
| 9 Back Honeycomb Panel | 10 Water Drain Plug |
| 11 Continuous Water Inlet | 12 Rear Grill Removal Screws |
| 13 Manual water filling through mug | 14 Manual water filling through pipe |

 ELECTRICAL WIRING DIAGRAM

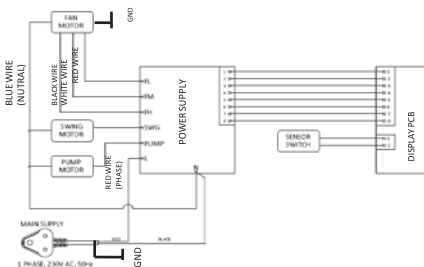

USE & OPERATION

 CONTROL PANEL



*Reference Image. Actual product may differ

FUNCTION BUTTONS



ON/OFF : Press the POWER button to turn the unit ON or OFF. When unit gets "ON" for first time, the cooler will start with factory settings /last combination of settings. Seven Segment Display will show "ON" for 5 second when we on the cooler and will show "OFF" when we turn off the cooler.



COOL : Press the COOL button on the control panel on pressing the indicator light will get illuminated. This will activate evaporative cooling. The water pump will operate and you will feel the cool air after the Honeycomb Cooling Media is completely wet. When the COOL indicator light is switched OFF, the unit can still function in a fan only mode (without evaporative cooling).



SWING : Press the SWING button on the control panel, on pressing the indicator light is illuminated. The louvers will begin to move left to right automatically.



FAN SPEED : Press the FAN SPEED button repeatedly to change the speed between F1 - F2- F3. The indicator light will show the selected speed:

F3 (HIGH), F2 (MED), F1 (LOW).

There is an increase/decrease button on remote to change the fan speed.

USE & OPERATION



TIMER : Press the TIMER button until the desired time duration setting is selected. When the set time has passed, the unit will automatically turn off (unit remains in Standby mode until power cord is unplugged from electrical socket). The TIMER function allows you to program the unit for up to 8 hours of use.



LOW WATER ALARM : The unit is equipped with a low water sensor. In cool Mode, when water in the tank is below the minimum level, you will hear a beeping sound and the indicator light will blink continuously and the pump will be off automatically.

First switch OFF the unit and unplug from the power outlet. Fill the water tank with water above the minimum water level mark. Plug in and switch ON again.

To deactivate the alarm and continue using the unit as a fan (without evaporative cooling), press the Alarm key. The Low Water Alarm will not activate in Fan mode only. The Low Water Alarm will beep again if the COOL function is activated while the water tank is still empty. The water empty LED above alarm switch will glow continuously in absence of water.



DISPLAY : When the unit is in "ON" condition, selected fan speed "F1,F2,F3" is displayed continuously. When unit is running with OFF Timer set, the display alternates between time left to turn off and fan speed.

USE & OPERATION

REMOTE CONTROL : Function buttons of remote control is similar to control panel, refer to operation of control panel.



- POWER : ON / OFF
- FAN : Controls fan speed 3 / 2 / 1 / off
- SPEED : **▲** Increase fan speed
▼ Decrease fan speed
- COOL : Controls cooling or fan operation
- SWING : Controls the vertical swing movement of louvers
- TIMER : Controls the timers function for automatic shut off
- ALARM : Deactivate the low water alarm function

The remote control requires AAA (2 x 1.5V) batteries for replacement.

Open the battery compartment at the back of the remote control and insert the AAA (2 x 1.5V) batteries inside. Care must be taken to insert the batteries according to the correct polarity (+ / -) markings shown inside the battery compartment

Always point the remote control signal transmitter towards the unit when operating. Make sure that the signal path is not obstructed.

Remove the batteries if the unit is not going to be used for an extended period of time.

 
Do not drop the remote control. Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries.

Do not mix old and new batteries.

Exhausted batteries are to be removed from the product.

USE & OPERATION

HOOSE CONNECTOR



FILLING WATER (CONTINUOUS WATER SUPPLY CONNECTION)

Connect water pipe to the continuous water supply connector located on the lower right side panel. Secure the connector with the pipe so that there is no leakage and turn on the water supply.

With the help of the water auto-refill mechanism, water inside the tank will refill automatically.

Every time the water comes below the minimum level, the water float valve will detect it and will start the water flow inside the tank. In the same way it also stops water in-flow when reaching the maximum level.

 
USE & OPERATION

This is an automated process and will not require you to refill the water tank manually.

Plug the unit into the power supply and turn the unit on.

INSTALLING HOSE ADAPTER AND FLOAT VALVE

- Connect the garden hose Connector and turn on the water.
- Verify water tight connections by visually examining.

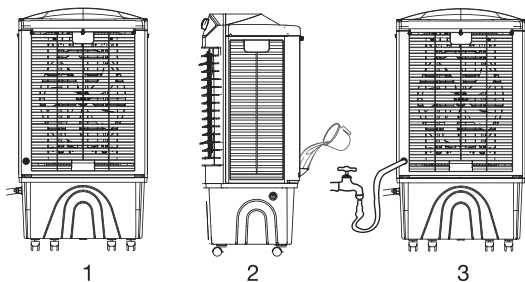

FILLING WATER

Water can be filled into the air cooler by 3 ways:

1. Continuous water supply (Auto Refill).
2. Manual water filling through mug.
3. Manual water filling through pipe

WATER LEVEL INDICATOR

Water Level indicator provided for reference only and placed to see sufficient water level.

CLEANING & MAINTENANCE

 
DRAINING AND CLEANING THE WATER TANK

- Turn the power “off” and disconnect the air cooler from the power supply.
- Move the unit to a location where it can be drained. Remove the cap from the water drain plug and allow the tank to empty (see parts description on page 9).
- After you have drained the water tank, please connect the water drain plug to its original position.
- Now refill the water tank up to Max level, wait for 5 min. and then drain the entire water once again. Use clean water for this procedure, so that maximum dust particles and remains are completely removed.
- If your cooler has not been used for a long duration, we advise you to clean the water tank at least 2 times before it is used again.


CLEANING THE HONEYCOMB MEDIA

- Turn off the unit, and unplug the power cord from wall outlet
Rotate the unit facing the back panel, and locate the Rear Grill
- Removal Screws (refer page 9., #12). Remove the screws with a screw driver.
- Pull the rear grill panel upwards, until it is completely removed. Now, the honeycomb media can be seen. Clean the honeycomb media with fresh water.
- Once the cleaning has been completed, assemble the unit as described above.
- Plug into the power supply and turn unit on.

WATER DRAIN PLUG

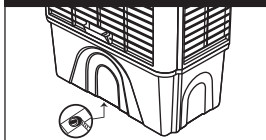

OPEN SCREWS

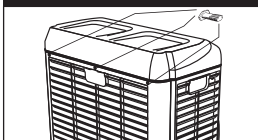 

CLEANING & MAINTENANCE

IMPORTANT

- The cooler is supplied with Honeycomb Cooling Media.
- The cleaning frequency for the Honeycomb media depends on local air and water conditions. In areas where the mineral content of water is high, mineral deposits may build up on the Honeycomb Cooling Media and restrict air flow. Draining the water reservoir and refilling with fresh water at least once a week will help reduce mineral deposits. If mineral deposits remain on the Honeycomb media, the media should be removed and washed under fresh water. The media should be cleaned every two months or sooner, depending on your needs.

Do not run the unit in COOL mode with stale water in the tank. Empty the tank and refill it with fresh water if the water has been standing in the tank for an extended period of time.

- For best results, allow the Honeycomb Cooling Media to dry after each use by turning off the cool function 15 minutes before turning the unit off.
- Draining the water reservoir and refilling with fresh water at least once a week will greatly reduce mineral deposits in the pads and help to extend the life of Honeycomb Cooling Media.

WARNING

- Before cleaning the unit, switch it to the “off” position and remove the plug from the power socket.
- To clean the outside, use a damp cloth to remove dirt and dust.
- Never use corrosive elements or any chemicals to clean this product.
- When the product is not in use, store the unit in a dry place out of direct sunlight.
- Maximum water inlet pressure 0.5MPa

TROUBLESHOOTING GUIDE

No discharge of air	Cord is not plugged in	Make sure power cord is plugged in and the supply switch is on.
	Power is not on	Turn the unit ON by changing the mechanical knob position of the control panel
	Motor Faulty	Contact Service centre
Not Cooling / Unit is making noise	Pump is not turned ON	On control Panel. Turn COOL FUNCTION TO "ON"
	Low or no water in tank, when COOL is selected	Refill water tank.
	Damaged Pump	Contact service centre.
Odor omission	When the Cooler is new	When the unit is used for the first time, the Honeycomb Cooling Media will have an odor, which will dissipate within a week of initial use. This is normal.
	If the Cooler has been used. There may be an algae issue.	Water is stale Clean the tank and fill with fresh water. Clean the Honeycomb Media.
		If problem persists contact the service centre.

TECHNICAL SPECIFICATIONS

Model No.	100SD1E/70SD1E
Voltage	230V
Frequency	50Hz
Wattage	190 W (100SD1E)/190 W (70SD1E)
Water Tank Capacity	100L / 70L
Cooling Media	Honeycomb
Product Dimension 100SD1	700 (L) x 485 (W) x 1230 (H)
Product Dimension 70SD1	700 (L) x 485 (W) x 1142 (H)
Net Weight	18 kg (100SD1E)/17.4 kg (70SD1E)

SERVICE AND WARRANTY

This appliance is warranted for 1 year against all manufacturing defects from the date of sale. In the event of any complaint, please contact Usha Care at Toll Free No. 1800 1033 111 or email at usha_care@ushainternational.com or log on to care.usha.com.

The warranty is valid only when:

- 1) The appliance has been installed, used and maintained in accordance with the instruction manual.
- 2) The warranty card and cash memo duly signed by the authorised dealer are presented with the complaint.
- 3) The appliance has not been opened or tampered with, by any unauthorised person.

This warranty does not apply for:

- 1) Damages due to chipping, peeling, plating and denting.
- 2) Breakage or damage to components made out of Bakelite, Urea, ABS, SAN and such plastic materials, rubber parts and cord.
- 3) Normal wear and tear of parts.
- 4) Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damages:

- 1) The Company will not be liable for any loss or damage arising/resulting from indirect or consequential loss or damages.
- 2) The Company aggregate liability in respect of all claims under the Warranty shall not exceed the original purchase price of the Product or, at Company's option, replacement of the Product with a like or similar Product.
- 3) The Company excludes all other warranties, conditions, terms, representations and undertakings whether express or implied.

Jurisdiction:

- 1) The courts at Delhi shall have exclusive jurisdiction to resolve any disputes between the parties arising under Terms and Conditions of Warranty.

S.NO: _____

CASH MEMO _____

DATE: _____

DEALER'S NAME AND ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

USHAcare™

——— Toll free ———

1800-1033-111

USHA INTERNATIONAL LTD.

Plot No.15, Institutional Area, Sector 32, Gurugram - 122 001 (Haryana) India

Tel: +91-124-4583100, Fax: +91-124-4583200

E-mail: usha_care@usha.com • Website: www.usha.com

Regd. Office: Surya Kiran Building, 19 K.G. Marg,

New Delhi(India) • Tel: +91-11-23318114 • Fax: +91-11-23318118

ISO 9001: 2015
Certified Company